


How to print S panel

(Rtai LUKA-40KM)



- It is explained in English version.
- Selecting buttons at the same location when installing other languages

I. Select card size (step-I)

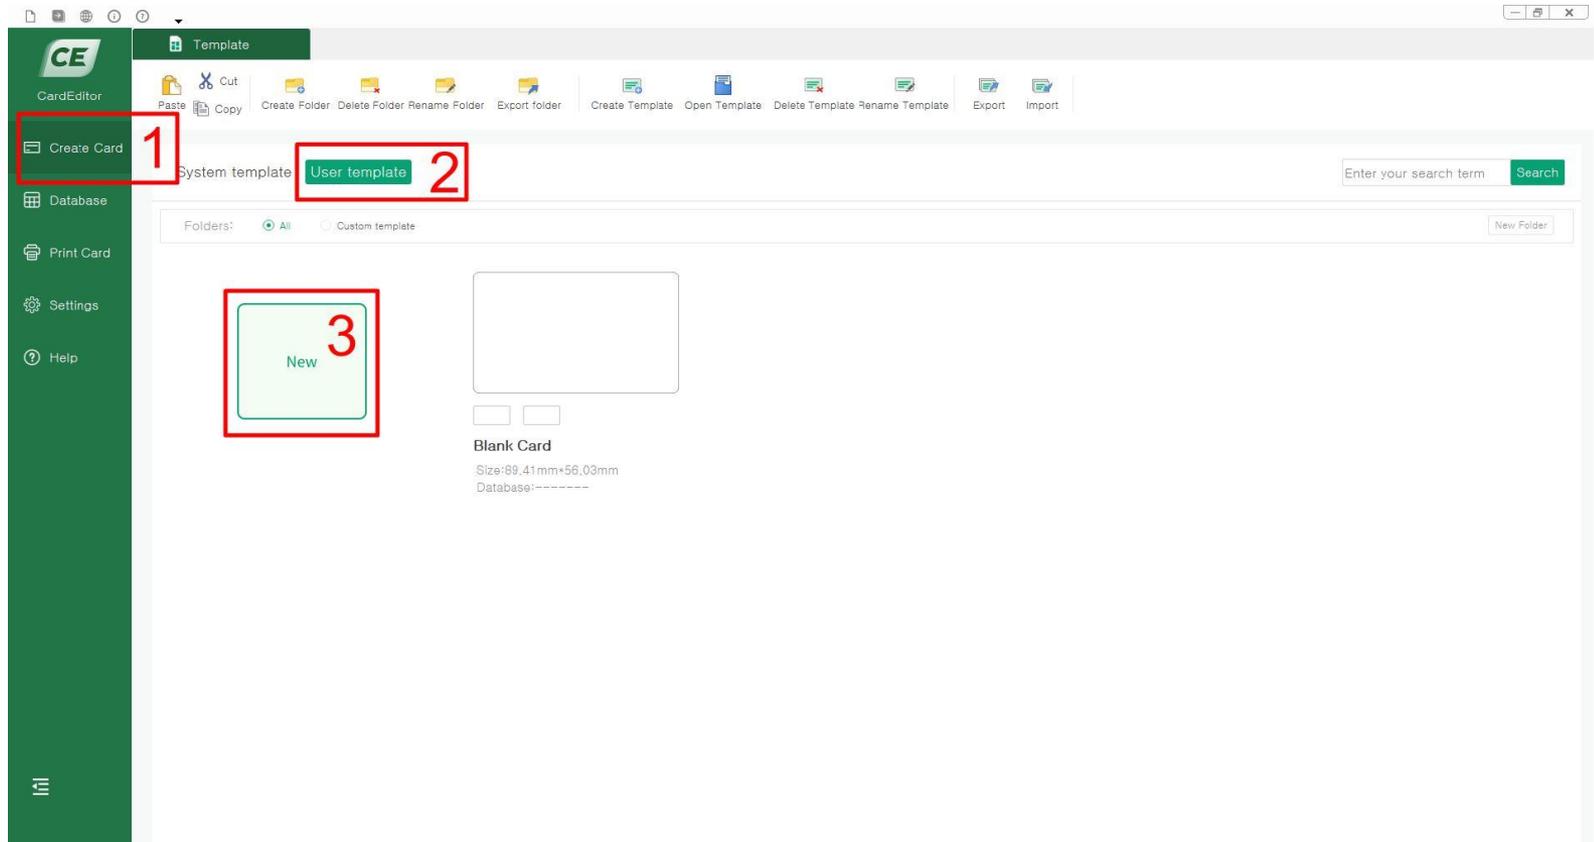

I. Select card size (step-2)

Card Selection

Customize	CR79 83.90X 51.00mm	CR80 85.60 X 53.98mm
CR90 92.00 X 60.00mm	CR100 98.50 X 67.00mm	ID2 105.00x74.00mm
ID3 125.00 X 88.00mm	IDn 135.00 X 105.00mm	CR80-Extra 89.41 X 56.03mm

Card Type: CR80_Extra

Card Orientation: Land. Port.


Card Name:

Width:


Height:

Overlayers: 2


2. Select overlay type

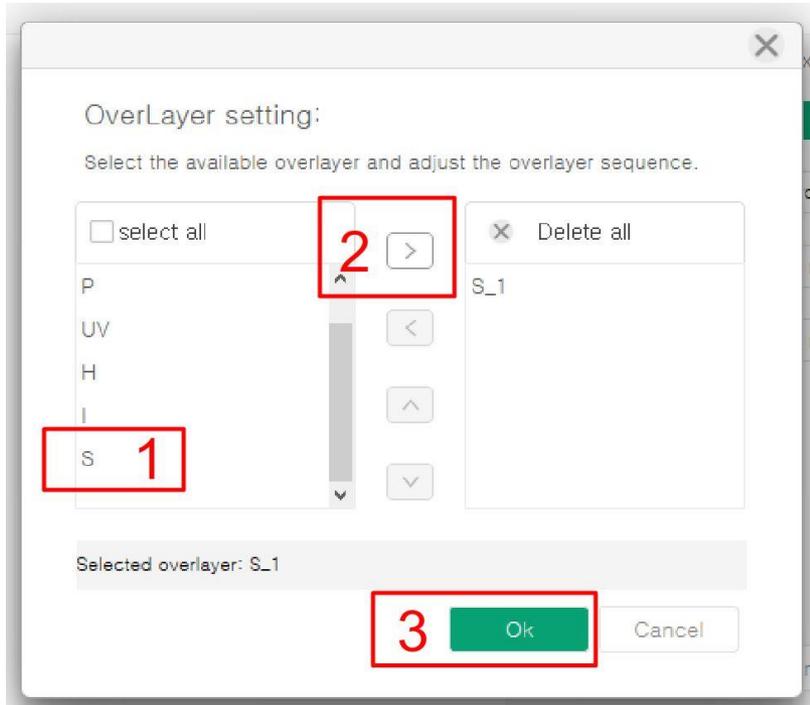


3. Select print image & sizing (Content)

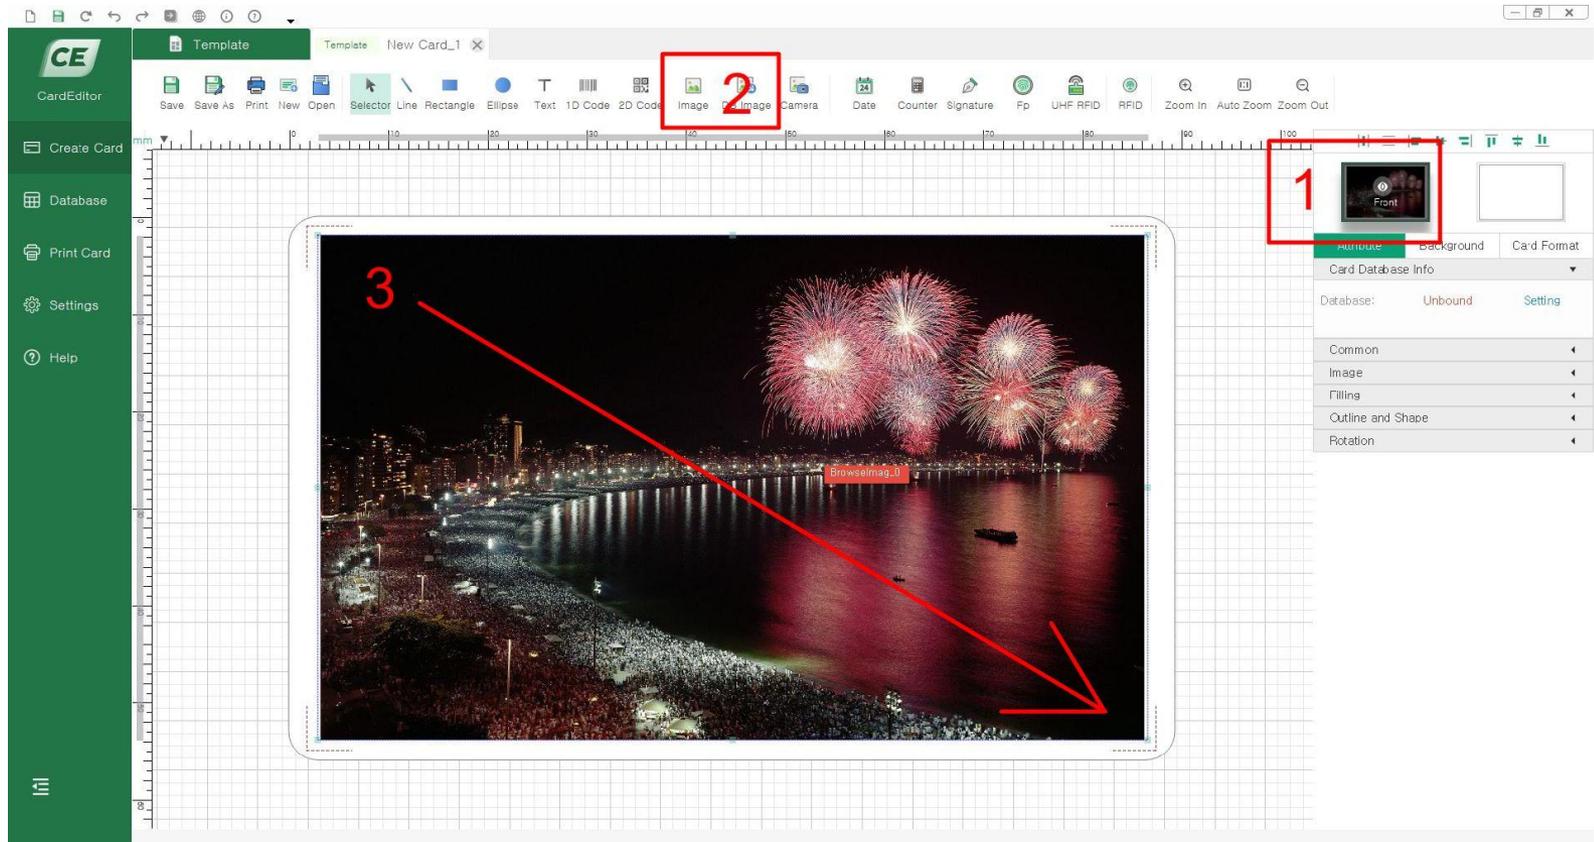


4. Select print image & sizing (S overlay)

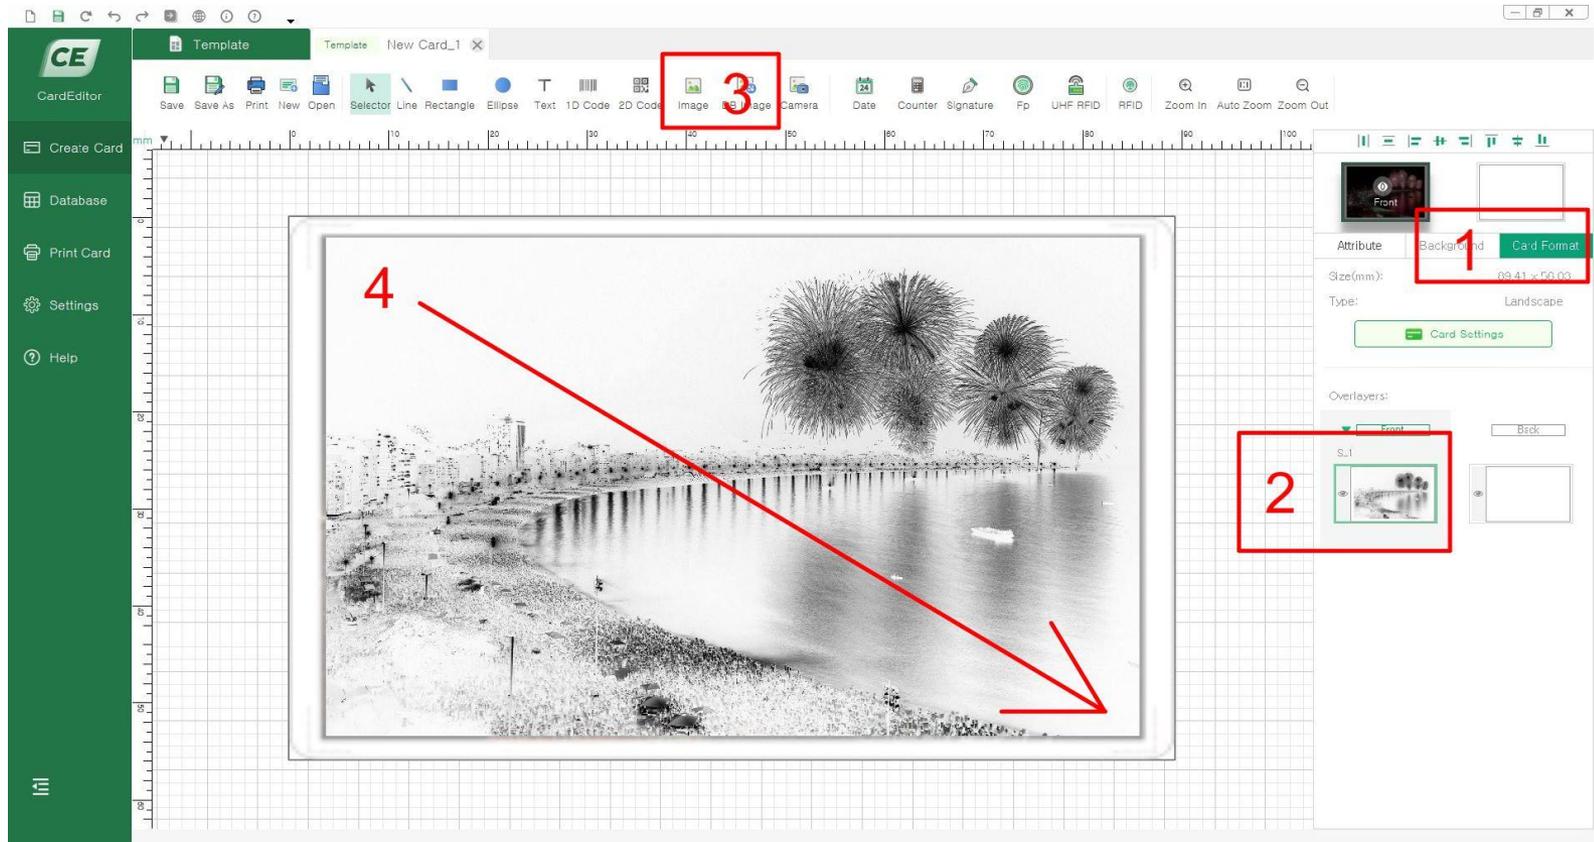

5. Fine-tune location and size (S overlay same operation)

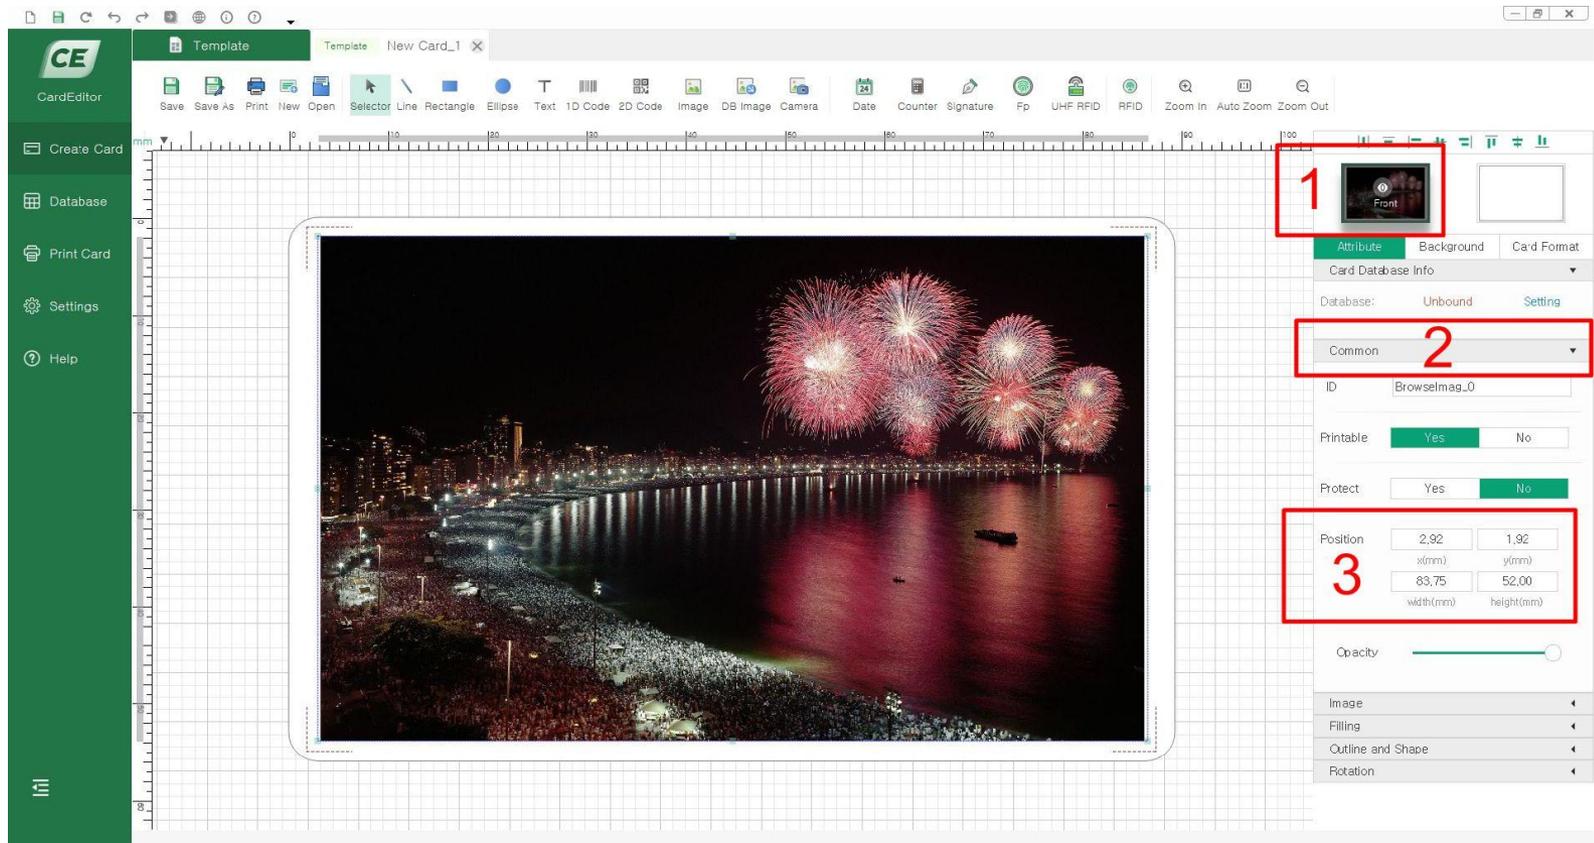

6. Select a printer and set output options

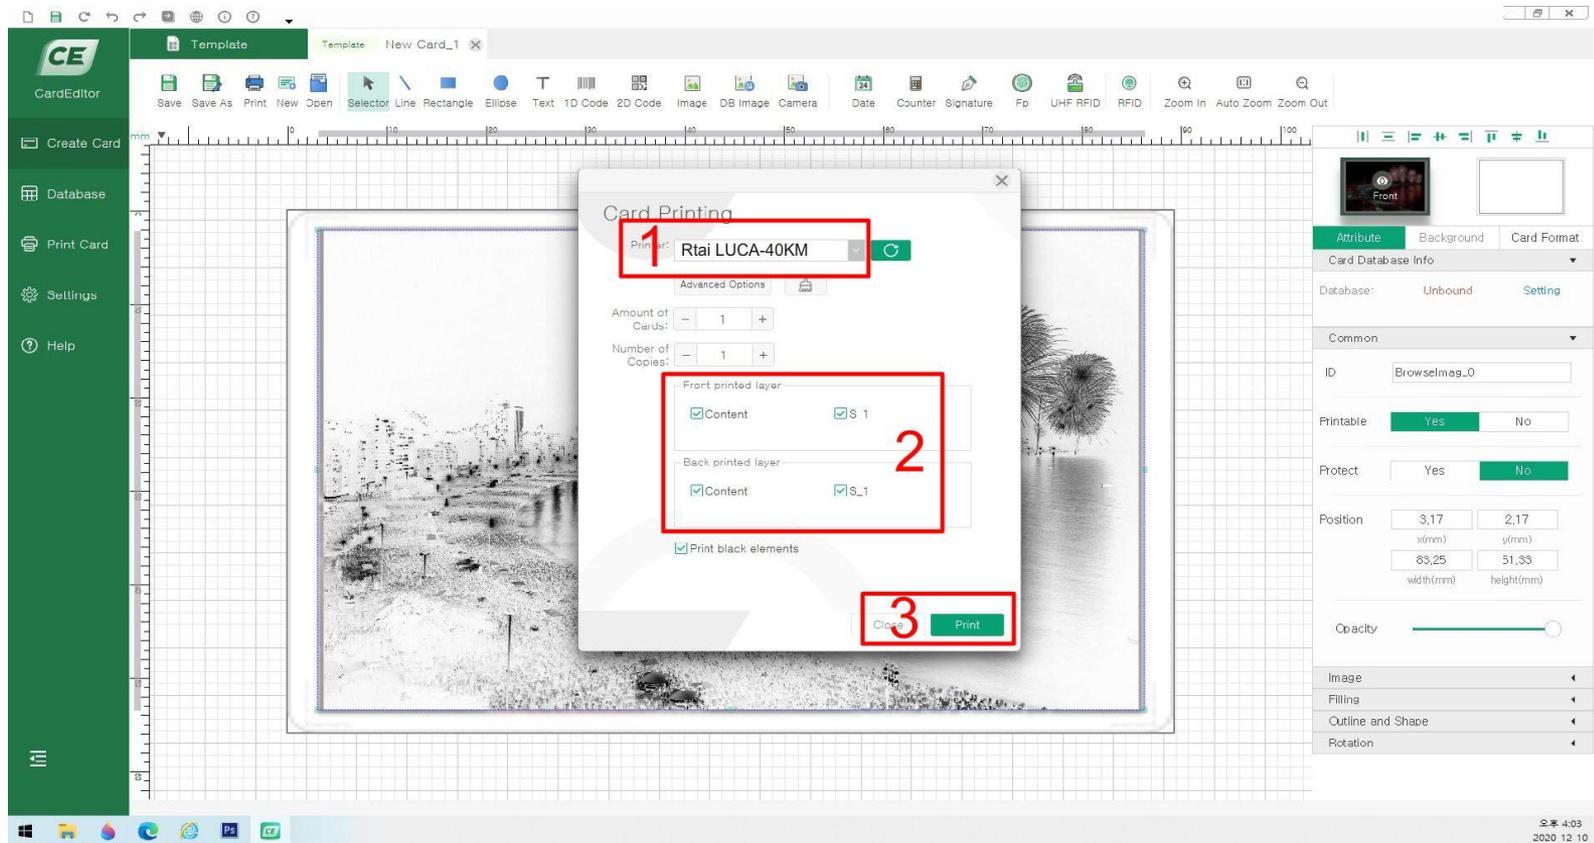

2. Turn off the back printed layer option when printing a section